


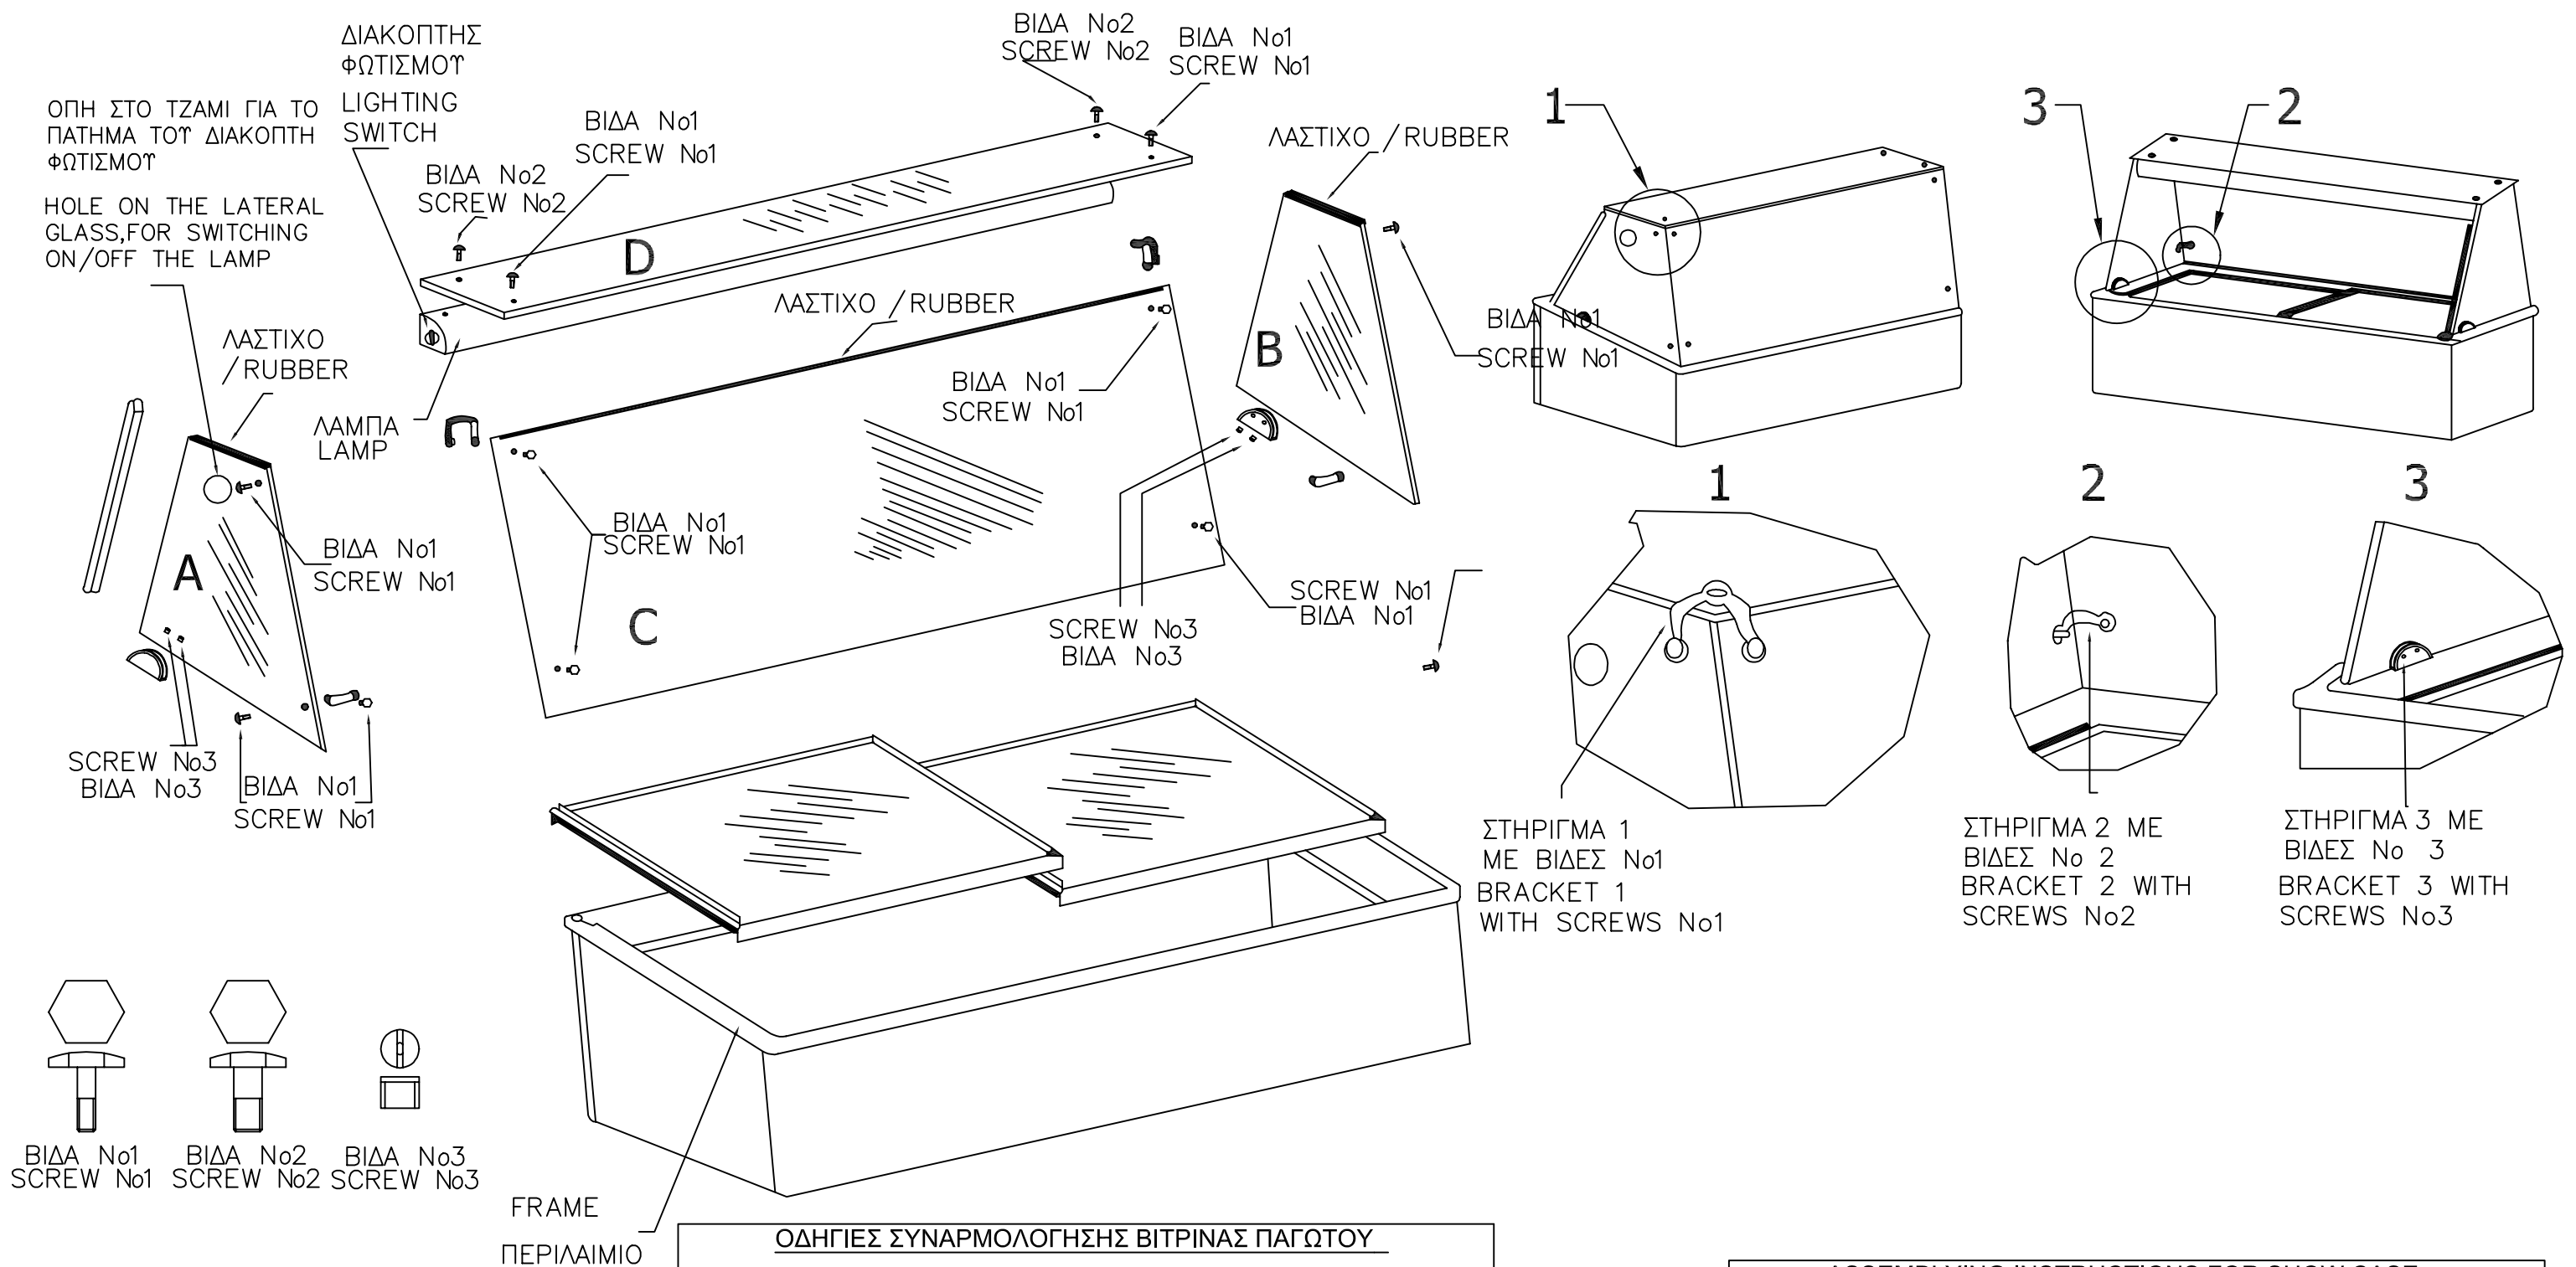

ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ ΒΙΤΡΙΝΑΣ ΠΑΓΩΤΟΥ

1. ΤΟΠΟΘΕΤΕΙΣΤΕ ΤΑ ΤΖΑΜΙΑ Α ΚΑΙ C ΠΑΝΩ ΣΤΙ ΠΛΑΣΤΙΚΟ ΠΕΡΙΛΑΙΜΙΟ ΤΟΥ ΨΥΓΕΙΟΥ ΚΑΙ ΕΝΩΣΤΕ ΤΑ ΜΕ ΤΑ ΣΤΗΡΙΓΜΑΤΑ 1 & 2 ΜΕ ΤΙΣ ΒΙΔΕΣ No 1 ΧΩΡΙΣ ΝΑ ΤΙΣ ΣΦΙΞΕΤΕ.
2. ΕΠΑΝΑΛΑΒΕΤΕ ΤΟ ΣΤΑΔΙΟ 1 ΓΙΑ ΤΑ ΤΖΑΜΙΑ Β & C.
3. ΣΤΕΡΕΩΣΤΕ ΤΑ ΤΖΑΜΙΑ Α&Β ΣΤΑ ΣΤΗΡΙΓΜΑΤΑ 3 ΤΟΥ ΠΛΑΣΤΙΚΟΥ ΠΕΡΙΛΑΙΜΙΟΥ ΜΕ ΤΙΣ ΒΙΔΕΣ No3 ΧΩΡΙΣ ΝΑ ΤΙΣ ΣΦΙΞΕΤΕ.
4. ΤΟΠΟΘΕΤΕΙΣΤΕ ΤΑ ΛΑΣΤΙΧΑ ΠΟΥ ΘΑ ΒΡΕΙΤΕ ΕΝΤΟΣ ΤΗΣ ΣΥΣΚΕΥΑΣΙΑΣ ΣΤΗΝ ΕΠΑΝΩ ΠΛΕΥΡΑ ΤΩΝ ΤΖΑΜΙΩΝ Α, Β ΚΑΙ C.
5. ΤΟΠΟΘΕΤΕΙΣΤΕ ΤΟ ΤΖΑΜΙ D ΠΑΝΩ ΣΤΑ ΤΖΑΜΙΑ Α, Β, C ΚΑΙ ΣΤΕΡΕΩΣΤΕ ΤΟ ΣΤΑ ΣΤΗΡΙΓΜΑΤΑ 1 ΧΡΗΣΙΜΟΠΟΙΩΝΤΑΣ ΤΙΣ ΒΙΔΕΣ No1.
6. ΣΤΕΡΕΩΣΤΕ ΤΗΝ ΘΗΚΗ ΦΩΤΙΣΜΟΥ ΣΤΟ ΚΑΤΩ ΜΕΡΟΣ ΤΟΥ ΤΖΑΜΙΟΥ D ΧΡΗΣΙΜΟΠΟΙΩΝΤΑΣ ΤΙΣ ΒΙΔΕΣ No2.
7. ΤΙΓΗΤΕΝ ALL THE SCREWS

ASSEMBLYING INSTRUCTIONS FOR SHOW CASE

1. PLACE THE GLASSES ON THE PLASTIC FRAME ON THE TOP OF THE FREEZER; KEEP THEM ATTACHED VIA THE BRACKETS AND SCREWS, WITHOUT TIGHTENING THE LAST ONES.
2. REPEAT THE STEP 1 FOR THE GLASSES B AND C.
3. FIX THE GLASSES A&B TO THE BRACKET 3 OF THE PLASTIC FRAME WITH THE SCREWS No3 WITHOUT TIGHTENING THEM.
4. PLACE THE RUBBERS THAT ARE INSIDE THE PACKAGING ON THE TOP SIDE OF THE GLASSES A,B AND C.
5. PLACE THE GLASS D OVER THE GLASSES A,B,C AND FIX IT TO THE BRACKETS 1 BY USING THE SCREWS No1.
6. FIX THE LAMP HOLDER AT THE BOTTOM SIDE OF GLASS D BY USING THE SCREWS No2.
7. TIGHTEN ALL THE SCREWS.